




Sagemcom F@st 5366S

The Sagemcom FAST 5366S is a wireless router or modem-router manufactured by Sagemcom Broadband SAS. It is used by internet service providers (ISPs) to provide internet connectivity to their customers. The Sagemcom FAST 5366S has 4 Gigabit Ethernet (GE) interface (LAN 1-4), 1 WAN Gigabit Ethernet Port, 1 USB Ports, 1 Telephones, 1 DSL Ports and it typically supports dual-band Wi-Fi, allowing devices to connect over both the 2.4GHz and 5GHz frequency bands. This enables better performance and reduced interference for connected devices.

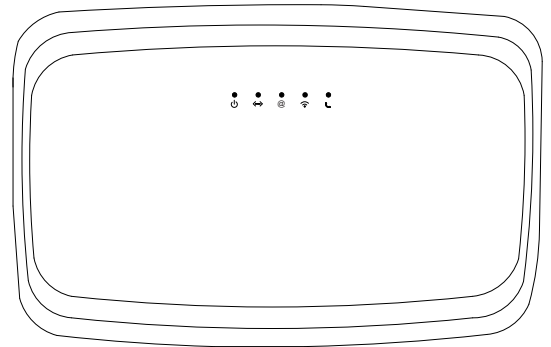

| ONT Details | | |
|-------------------------------|----------------------|---|
| CPE manufacturer/model | Sagemcom F@st 5366S | |
| Chipset | BCM 68380 | |
| Product Overview | | |
| WAN | Sagemcom F@st 5366S | |
| LAN | 4xGb Ethernet | |
| POTS | 1x POTS ports RJ11 | |
| Wireless Wi-Fi | WLAN 802.11 b/g/n/ac | |
| USB | 1 port USB 2.0 | |
| CPE hardware Major Components | | Description |
| CPU | | BCM 68380 |
| Switch Chipset | | Integrated in BCM 68380 |
| WiFi Chipset | 2.4GHz | BCM43217 |
| WiFi Chipset | 5 GHz | BCM43602 |
| SLIC | | LE9540 |
| NAND Flash | | 128MB |
| DDR2 | | DDR3 256MB |
| Port/Button | | Function |
| ON/OFF | | Indicates the power button. It is used to power on or power off the device. |
| POWER | | Indicates the power port, used to connect to the power adapter or backup battery unit. |
| USB | | Indicates USB host port, used to connect to USB storage devices. |
| TEL1-TEL2 | | Indicates VoIP telephone ports (RJ-11), used to connecting to the ports on telephone sets. |
| LAN1-LAN4 | | Indicates auto-sensing 10/100/1000M Base-T Ethernet ports (RJ-45), used to connect to PCs or IP set-top boxes (STBs). |
| Reset | | Indicates the reset button. Press the button for a short time to reset the device; press the button for a long time (longer than 10s) to restore the device to the default settings and reset the device. |
| WLAN | | Indicates the WLAN button, used to enable or disable the WLAN function. |
| WPS | | Indicates the WLAN protected setup. |

| LED | Description | Status | Description |
|----------|--------------------------|----------------|--|
| Power | Power supply LED | Off | Power Box is off. |
| | | Flashing Green | Power box booting - 1Hz (50% on 50% off) |
| | | Solid Green | Power Box is ready to use. |
| | | Flashing Amber | Upgrade ongoing - 1Hz (50% on 50% off) |
| Internet | Internet LED | Off | There is no Internet connection. |
| | | Solid Green | The RGW received an IP address |
| | | Flashing Green | Traffic between LAN and WAN -2Hz (50% on 50% off) |
| LAN | LAN port LED | Off | There is no device connected to LAN port |
| | | Solid Green | There is a device connected to LAN port |
| | | Flashing Green | The device connected to LAN port is exchanging data - 2Hz (50% on 50% off) |
| Phone | Voice telephone port LED | Off | One account: The account is disabled |
| | | | Two accounts: both accounts are disabled |
| | | Solid Green | One account: The SIP account is registered, able to make and receive calls. |
| | | | Two accounts: Both SIP accounts are registered, able to make and receive calls. |
| | | Flashing Green | One or two account: Call ongoing - 2Hz (50% on 50% off) |
| | | Solid Amber | One account: N/A |
| | | | Two accounts: one of the 2 accounts gets a wrong authentication |
| | | Solid Red | One account: Wrong authentication |
| | | | Two accounts: both accounts get a wrong authentication |
| Wifi | WLAN LED | Off | The wireless interface is disabled. |
| | | Solid Green | The Wireless interface is activated. |
| | | Flashing Green | The Wireless interface is receiving or transmitting data. - 2Hz (50% on 50% off) |
| WPS | WPS LED | Off | Default status - WPS window is closed |
| | | Flashing Green | The WPS pairing is ongoing - 2Hz (50% on 50% off) |
| | | Solid Green | WPS pairing succesfull (the LED turns off after 10 secs) |